


DW4020: 5 Static IP ROUTER

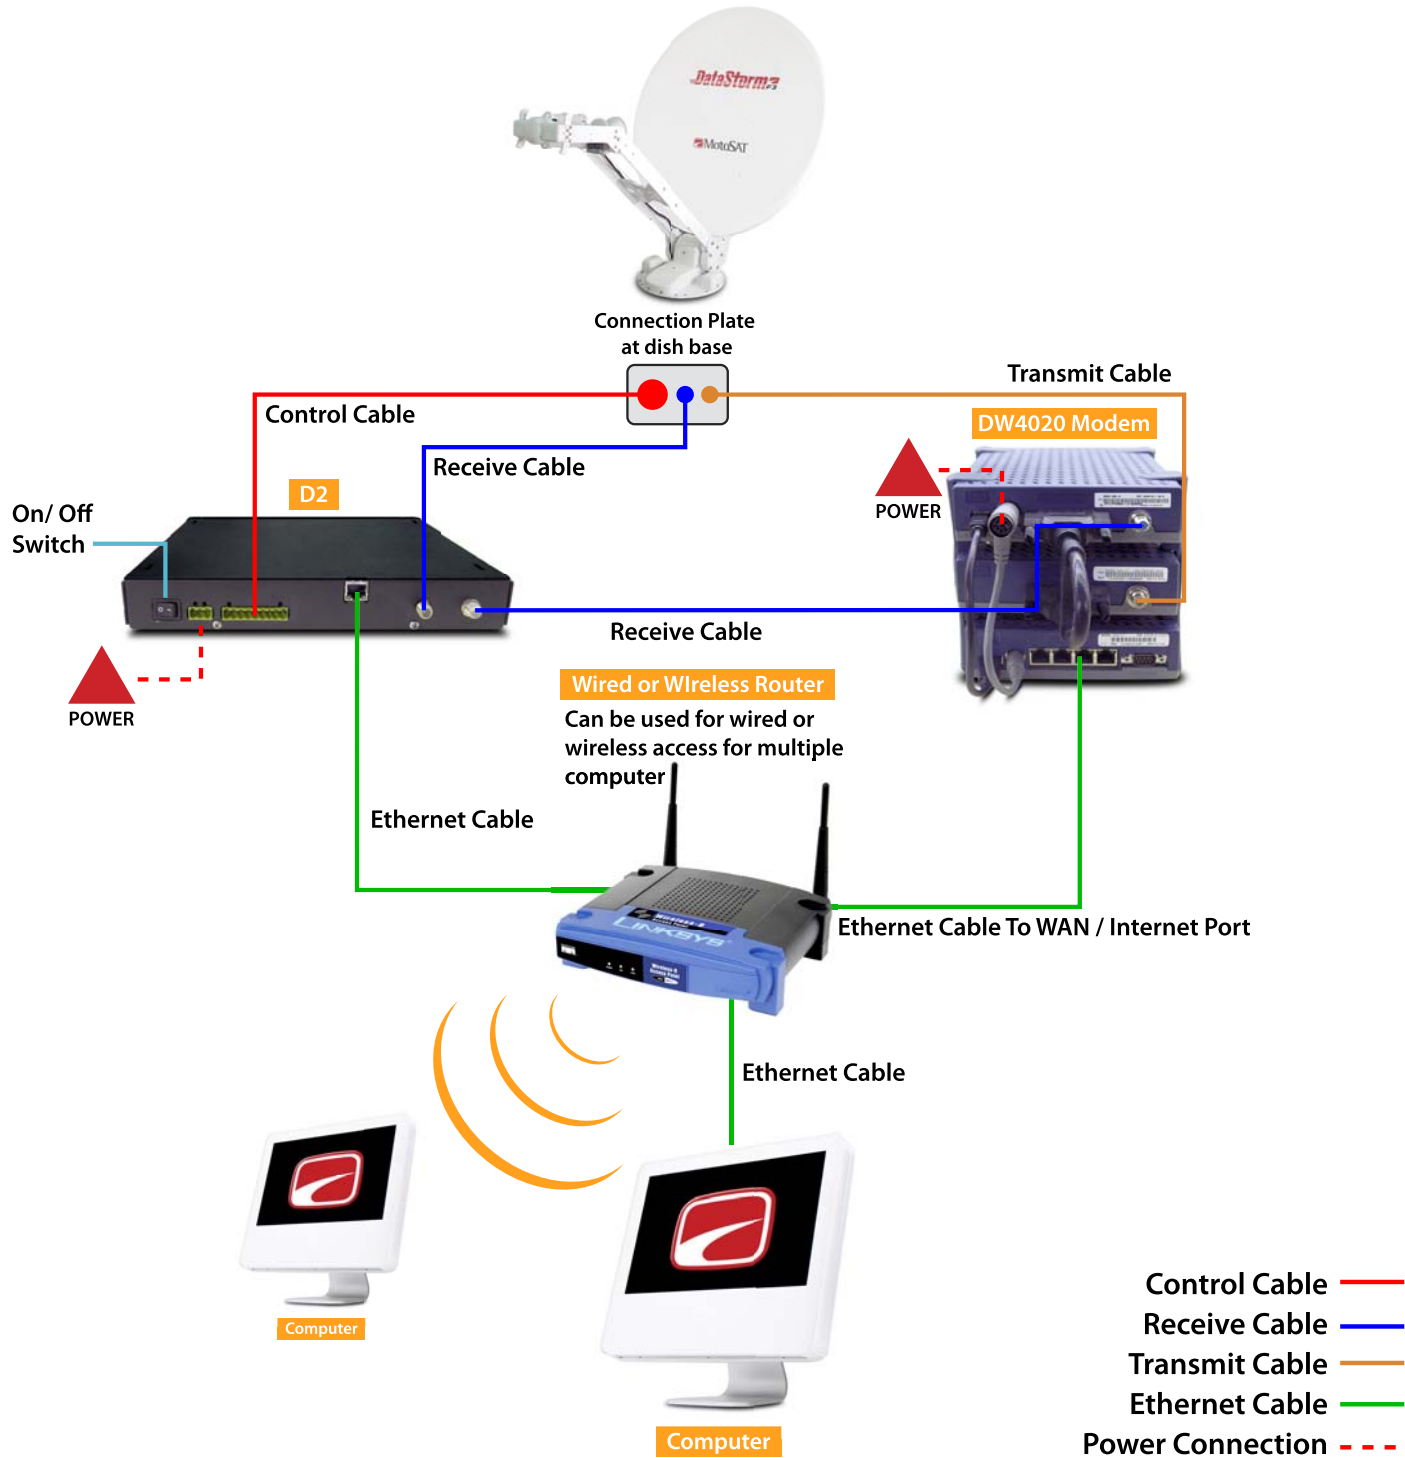

ROUTER [Multiple Computers]



D2 Settings:

- IP-192.168.1.250
- Subnet-Leave as is
- Modem Gateway-192.168.0.1
- *Router Gateway-192.168.1.1**
- DNS-Leave as is

Computer(s) Settings

- Obtain IP Address Automatically
- Obtain DNS Automatically

Router Settings [WAN Address are an example*]

- WANP-66.88.44.33 LAN IP-192.168.1.1** [or DHCP]
- Subnet-255.255.255.252 Subnet-255.255.255.0
- Gateway-66.88.44.32 Gateway-NONE
- DNS-66.82.4.8, 66.82.4.12

*Must use v.3.5.4 in this configuration
 **Linksys Router Default Configuration

*WAN IP given via modem commissioning
 **Linksys Router Default Configuration

MUST PROGRAM THE SATELLITE SPECIFIC SETTINGS [See the D2 Configuration section of the setup manual]

DW4020, D2, and Computer IP Guide [5 Static IP] WITH Router

- **DW4020 Settings**

IP Configuration

**IP-i.e. 66.88.44.32 [See your SAN confirmation sheet for actual IP's]
SUBNET-255.255.255.248**

- **D2 Settings**

IP Configuration

**IP-192.168.1.250
SUBNET-255.255.255.0
MODEM GATEWAY-192.168.0.1
ROUTER GATEWAY- 192.168.1.1
DNS-Leave as is**

- **Your Computer's Settings**

IP Configuration [a wired or wireless link via the router]

**-Obtain IP Address Automatically
-Obtain DNS Automatically**

- **Router Settings**

WAN Configuration

**IP-66.88.44.33
SUBNET-255.255.255.248
GATEWAY-66.88.44.32
DNS-1-66.82.4.8
2-66.82.4.12**

LAN Configuration

DHCP [Usually will be under the 192.168.1.1* address]

***Linksys Router Configuration**

- **Remaining Static IP address can be used on other network devices as you see fit; though the devices must be directly connected to the DW4020 in order to utilize the remaining static IP addresses.**

**PLEASE REFER TO YOUR INSTALLER OR SAN CONFIRMATION SHEET FOR
ACTUAL IP SETTINGS ON YOUR MODEM DEVICE**