


# DW6000: 1 Static IP NO ROUTER



## NO ROUTER [1 Computer]

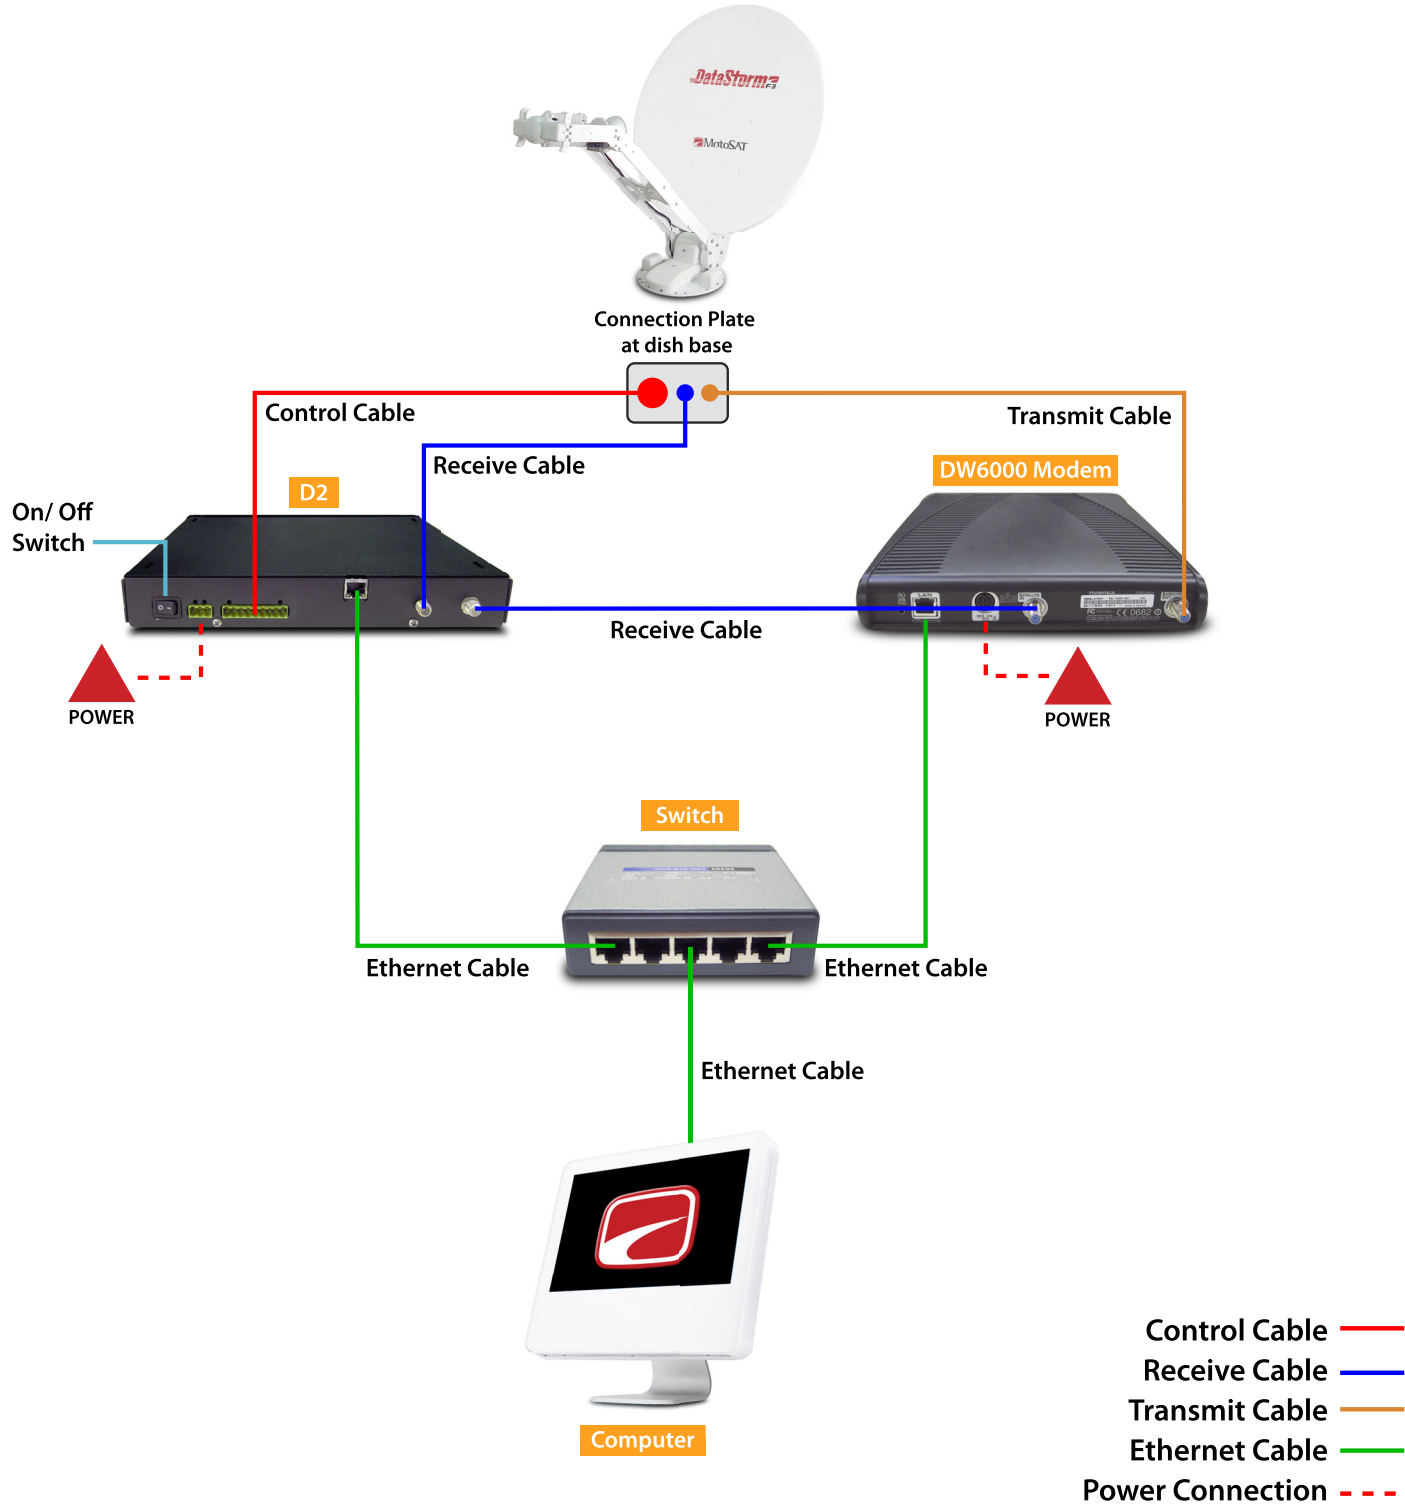

### D2 Settings:

**IP**-192.168.0.2

**Subnet**-Leave as is

**Modem Gateway**-Leave as is

**\*Router Gateway**-Leave as is

**DNS**-Leave as is

\*Only available on v. 3.5.4 and higher

**MUST PROGRAM THE SATELLITE SPECIFIC SETTINGS [See the D2 Configuration section of the setup manual]**

### Computer(s) Settings [Example Static IP\*\* used]:

**1st IP**-66.88.44.33

**Subnet**-255.255.255.252

**Gateway**-66.88.44.32

**DNS**-66.82.4.8

66.82.4.12

**2nd IP**-192.168.0.10

**Subnet**-255.255.255.0

**Gateway**-NONE

\*\*The static IP is given at the time of commissioning. Refer to your commissioning documentation for actual IP settings.

## **DW6000, D2, and Computer IP Guide [1 Static IP] NO Router**

### **• DW6000 Settings [1 Static IP]**

#### **WAN**

**IP-i.e. 66.88.44.32 [See your SAN confirmation sheet for actual IP's]  
SUBNET-255.255.255.252**

#### **LAN**

**IP-192.168.0.1  
SUBNET-255.255.255.252**

### **• D2 Settings**

#### **IP Configuration**

**IP-192.168.0.2**

**Subnet-Leave as is**

**Modem Gateway- Leave as is**

**\*Router Gateway-Leave as is**

**DNS-Leave as is**

**\*DataStorm Beta v.3.5.4 or higher**

### **• Your Computer's Settings**

#### **1<sup>st</sup> IP Configuration [for Internet access and DW4020 access]**

**IP-i.e. 66.88.44.33 [One IP Above the DW4020 Address; See your SAN  
confirmation sheet for actual IP's]**

**SUBNET-255.255.255.252**

**GATEWAY-i.e. 66.88.44.32 [the WAN IP of the DW4020]**

**DNS-1-66.82.4.8**

**2-66.82.4.12**

#### **2<sup>nd</sup> [Advanced] IP Configuration [for D2 access]**

**IP-192.168.0.10**

**SUBNET-255.255.255.0**

**PLEASE REFER TO YOUR INSTALLER OR SAN CONFIRMATION SHEET FOR  
ACTUAL IP SETTINGS ON YOUR MODEM DEVICE**