


DW6000: 1 Static IP ROUTER



ROUTER [Multiple Computers*]

*Must use DataStorm Beta software v.3.5.4 or higher

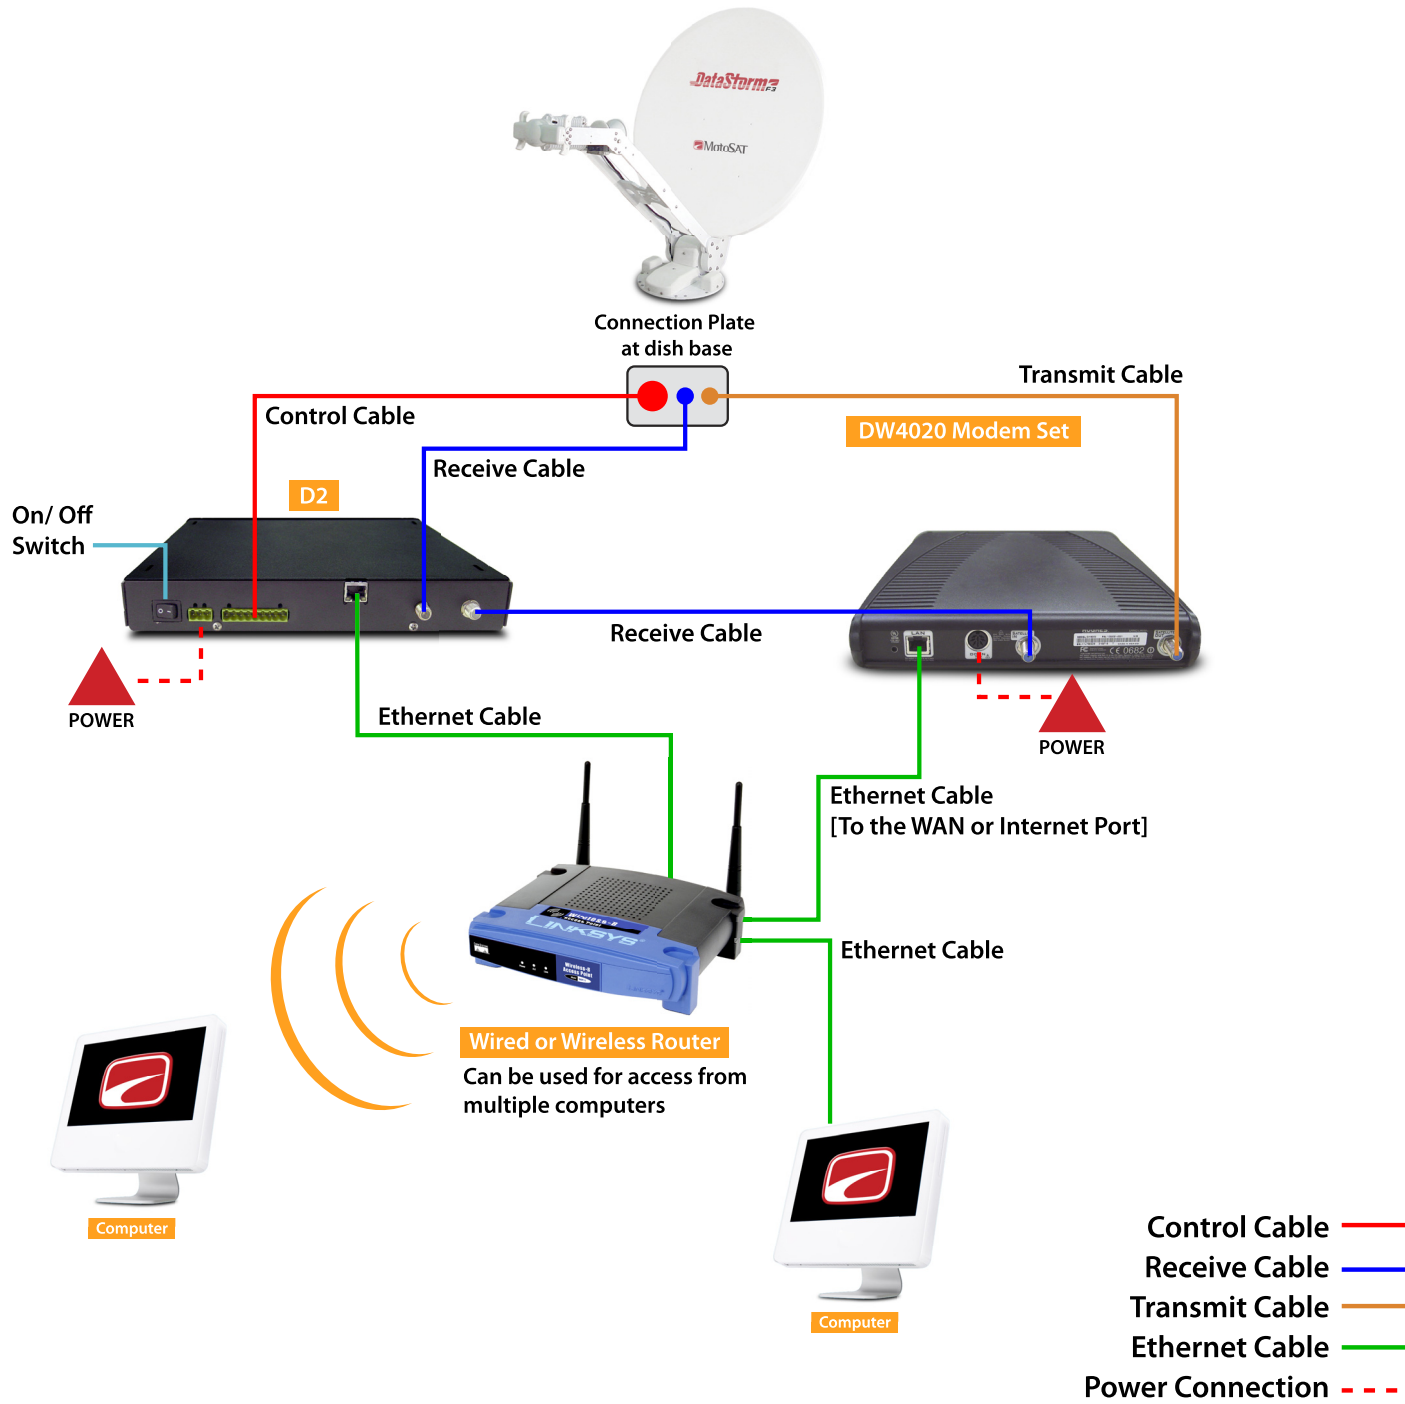

D2 Settings:

- IP-192.168.1.250
- Subnet-Leave as is
- Modem Gateway-192.168.0.1
- *Router Gateway-192.168.1.1
- DNS-Leave as is

Computer(s) Settings

- Obtain IP Address Automatically
- Obtain DNS Automatically

Router Settings [WAN Address are an example**]

- WAN IP-66.88.44.33
- Subnet-255.255.255.252
- Gateway-66.88.44.32
- DNS-66.82.4.8
- LAN IP-192.168.1.1 [or DHCP]
- Subnet-255.255.255.0
- Gateway-NONE

*The static IP is given at the time of commissioning. Refer to your commissioning documentation for actual IP settings.

*Must use v.3.5.4 in this configuration

MUST PROGRAM THE SATELLITE SPECIFIC SETTINGS [See the D2 Configuration section of the setup manual]

DW6000, D2, and Computer IP Guide [1 Static IP] WITH Router

• DW6000 Settings [1 Static IP]

WAN

IP-i.e. 66.88.44.32 [See your SAN confirmation sheet for actual IP's]
SUBNET-255.255.255.252

LAN

IP-192.168.0.1
SUBNET-255.255.255.252

• D2 Settings

IP Configuration

IP-192.168.1.250
Subnet-255.255.255.0
Modem Gateway-192.168.0.1
Router Gateway-192.168.1.1
DNS-Leave as is

• Your Computer(s) Settings

IP Configuration

IP-192.168.1.[2-250 you can choose]
SUBNET-255.255.255.0
GATEWAY-192.168.1.1
DNS-1-66.82.4.8
2-66.82.4.12

• Router Settings

WAN/Internet Configuration

IP-66.88.44.33 [One IP Address above the 4020's address]
SUBNET-255.255.255.252
GATEWAY-66.88.44.32 [The 4020's IP Address]
DNS-1-66.82.4.8
2-66.82.4.12

LAN Configuration

IP-DHCP [Default is usually 192.168.1.1]
SUBNET-DHCP [Default is usually 255.255.255.0]

**PLEASE REFER TO YOUR INSTALLER OR SAN CONFIRMATION SHEET FOR
ACTUAL IP SETTINGS ON YOUR MODEM DEVICE**