


# DW6000: NAT Enabled

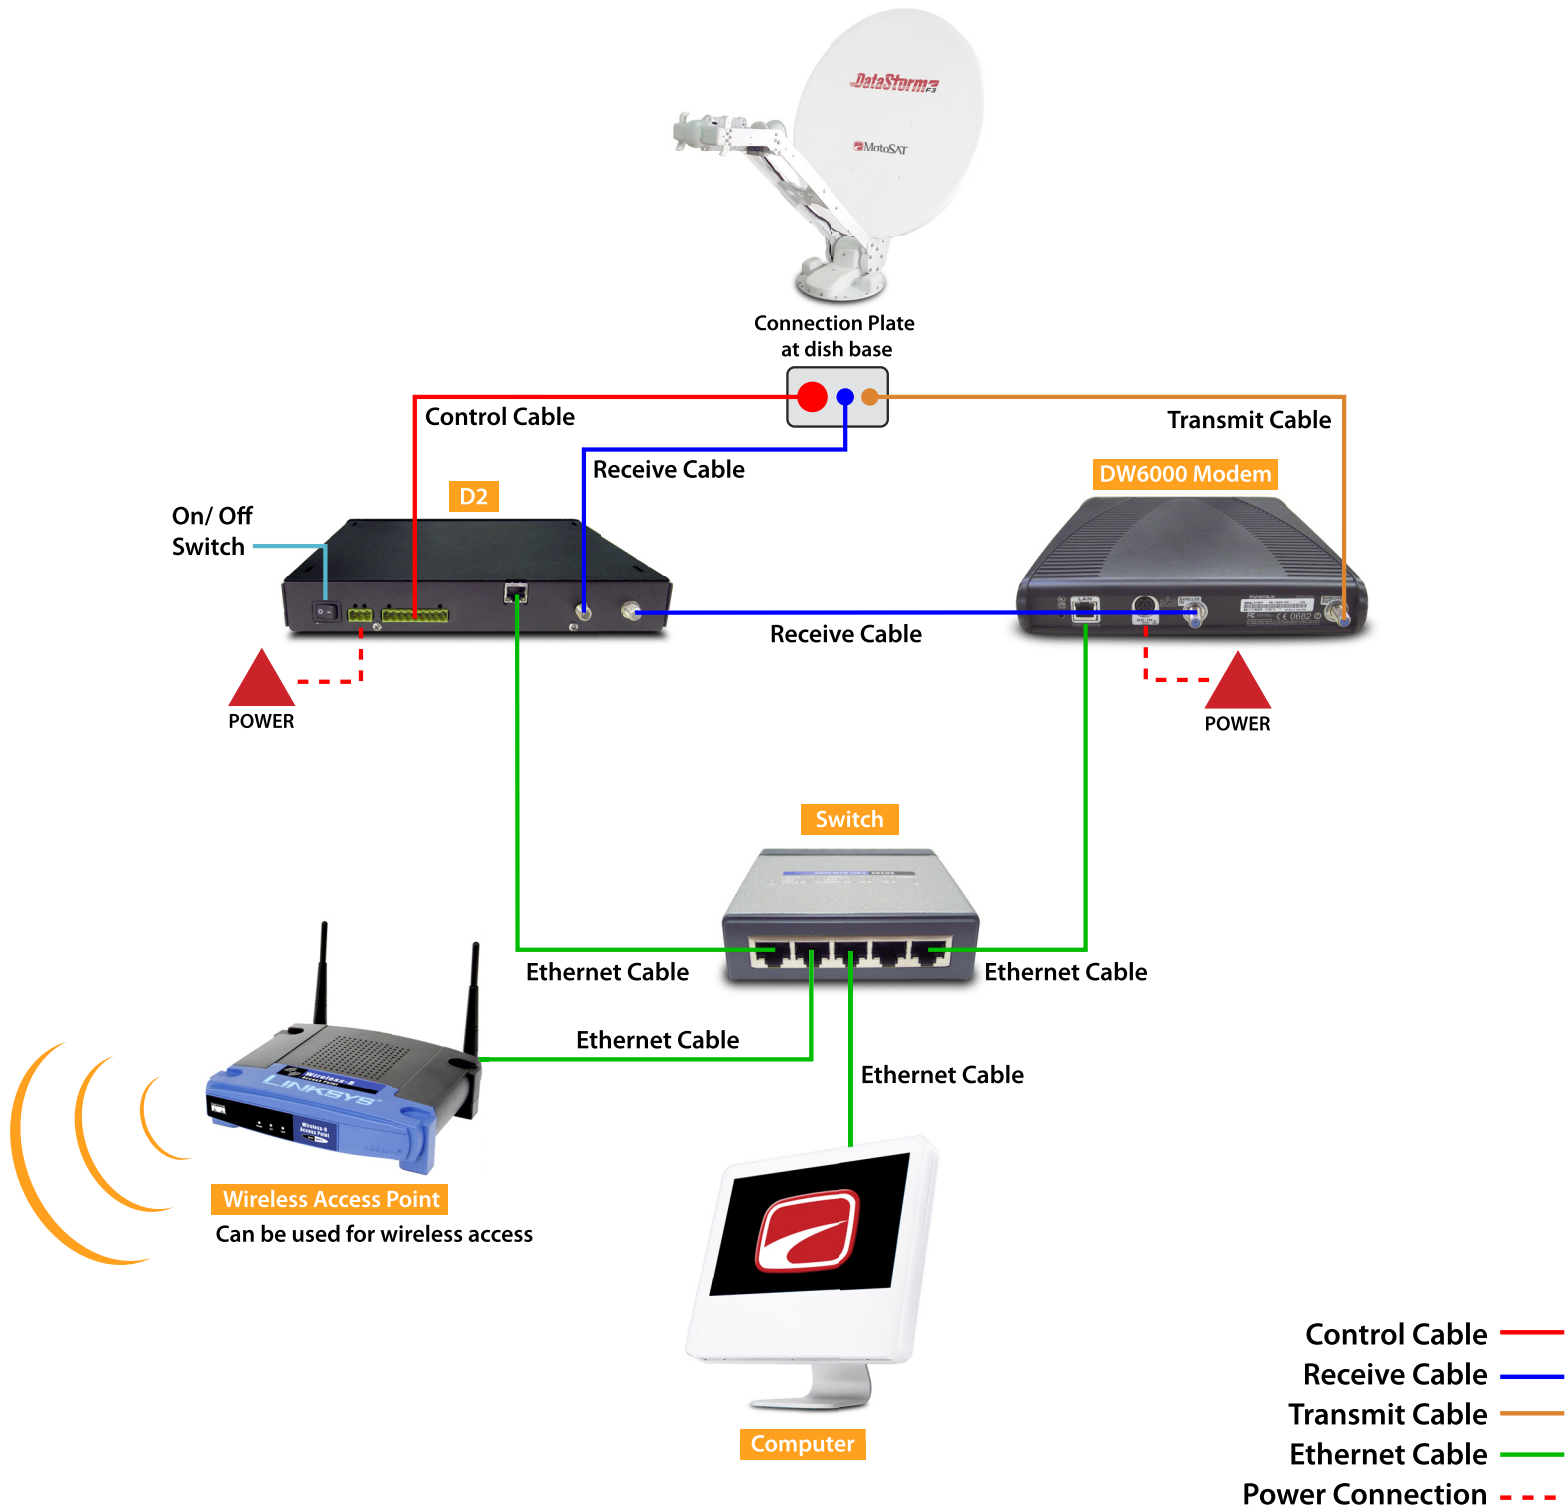

## D2 Settings:

- IP-Leave as is
- Subnet-Leave as is
- Modem Gateway-Leave as is
- \*Router Gateway-Leave as is
- DNS-Leave as is

\*Only available on v. 3.5.4 and higher

**MUST PROGRAM THE SATELLITE SPECIFIC SETTINGS [See the D2 Configuration section of the setup manual]**

## Computer(s) Settings:

- Obtain IP Address Automatically
- Obtain DNS Server Automatically

## DW6000, D2, and Computer IP Guide [NAT Enabled]

**Required Hardware:** Hub/Switch with optional Wireless Access Point

- **DW6000 Settings [NAT Enabled]**

  - IP Configuration

    - IP-192.168.0.1

    - SUBNET-255.255.255.0

- **D2 Settings**

  - IP Configuration

    - Leave all the network settings as default

- **Your Computer's Settings**

  - Obtain IP Address Automatically

  - Obtain DNS Server Automatically

