


# Bird on Wire Installation Procedure

(Note: This installation procedure is generic. Which side to install will vary with kit.)

1. Remove the 4 cover screws (this will allow the cover to be opened).  
Remove the cable plug from the cover.



2. Locate the 2 small coaxial cables that are pre-installed and terminated under the cover. Remove the plug from the side cover and route the cables through that hole.

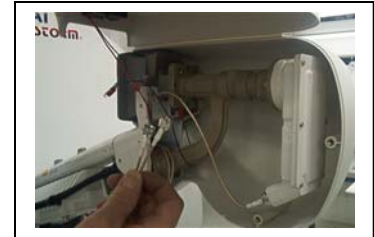

3. Close the cover and replace the screws.  
Attach the LNB bracket to the DataStorm Arm using the 3 screws provided.



4. Place a small amount of Lube Jel into each connector (can be purchased at Radio Shack under the name "LUBE JEL"). This will prevent moisture from contaminating this connection causing premature signal failure.



5. Connect the coax cables to the LNB. Snug the connector but do not over tighten. Care should be used when handling these connectors to prevent unnecessary damage.



6. Attach the protective cover using the screws provided.



**Note: The connections at the base of the DataStorm marked "DTV 1 & DTV 2" are to run to your Satellite Receiver.**